

 
Antel®Universal Satellite Receiver Remote
RM-408E

Universal Satellite Remote Control



User manual

Product Introduction

RM-408E is a kind of Universal Satellite Remote Control, not only possessing novel appearance, but also designed with brand-new intelligent digital searching to apply proper brand mode. It can basically control a majority of Satellites of various brands and models made in different years. The unit is simple to operate and will bring you much convenience. The remote control is an optimal choice in case your TV remote control is missing, out of order or damaged.

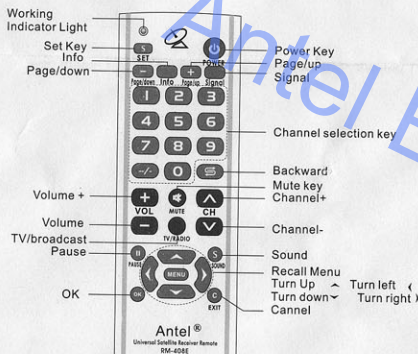Panel Description:**Battery Installation**

Open the battery cover, put in two new AAA (No.7#) alkaline batteries (not attached) according to the "+/-" symbol inside the battery pack as shown in the figure.

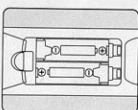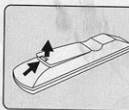**Cautions on Battery Use**

- When the batteries are being replaced, the original setting can remain 45 minutes if no key on the remote control is touched. Otherwise, the original setting will be lost, and you have to reset your device.
- As our remote control of low power consumption, the batteries have 15 months service life under normal conditions. However, its service life may be shortened if used or operated improperly.
- Do not use old and new batteries or batteries of different models at the same time.
- In the event of battery leakage, take out the batteries, wipe the battery compartment clean, and exchange new batteries.
- If this remote control is intended to be not in use for a long time, please remove the batteries.

Setting of Remote Controller


Two methods (Method A/B) are provided to set this remote control, any one of which can be used in operation.

A. To search applicable models by entering manual codes

- Switch on the TV set and the Satellite receiver manually. Point this remote control directly to the Satellite. Press and hold the "S" key (abt 5 minutes) until the indicator light is on.



- Press the Power key once. The indicator light illuminates. The remote controller enters into the mode of automatic searching. Please pay attention to the TV screen. Upon appearance of the "MUTE" (静音) symbol, press any key on the remote controller to lock the code, and then the indicator light is on (doesn't illuminate).

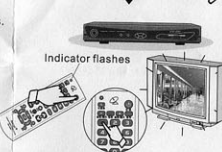

- Test whether the keys (exclude Power key, "Volume +", "Volume -" key) on the remote control function well. If the keys function well, press "S" key, then the indicator light is out. Setting is finished. If keying does not work, reset from Step 2.




Notice: Please be patient during setting due to so many codes.

B. To search applicable models in a manual steady manner

- Switch on the TV set and the Satellite receiver manually. Point this remote control directly to the Satellite receiver.




- Press and hold the "S" key (abt 5 minutes) until the indicator light is on.

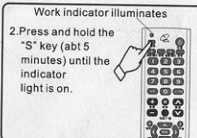

- Press the "Volume +", key one time and then release it to see whether a volume symbol appears on the TV screen. If no such symbol occurs, repeat the procedure.



- Upon appearance of the volume symbol, press the "S" key immediately, and then the indicator light goes out. Setting is finished.

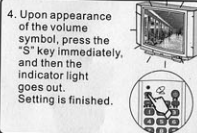

- Test whether the keys on the remote control function well.



- If the keys function well, the setting is successful. If keying does not work, reset from Step 2 until find a proper code for the Satellite receiver.

**Brand list**

Tongda	Huailing	Tongzhou	Guosbeer	Zhongda	Dijite	Yingshong
hualianfa	kejing	kanying	PBI	huayi	CHANGHONG	TIF
jintake	gaosirele	hangke	dongshi	shenyiny	hisense	Haikewei
xingzhongshi	tiancheng	henghe	guangmao	zhuoyi	siyom-sa	djia
zhongsh	jiexun	huaser	ruyi	huashu	shangfeng	leitong
lingtong	erling	yinhe	hanglanke	baisheng	chuangxin	
nopush	OTHER BRAND					

Notice: This remote control is suitable for most of the above mentioned brands.

Problem Solving

occurs during setting or using this remote control:

- Ensure that the remote control directly aims at the Satellite receiver that you desire to control and there is no barrier there between.
- Check that there are batteries available in the controller, and the polarities of the batteries are correct; in particular, if the original code is lost during battery replacing, a resetting is necessary.
- In case the remote control is operated improperly, it's possible that it stops to work. In this case, you need to take out the batteries and reinstall them 20 minutes later, then the controller will resume to the normal application.

Technical Parameters

Remote Control Distance: About 8 meters (Varies with electrical appliance models)
Power Supply: DC 3V
Weight: About 60g (batteries excluded)
Exterior Sizes: W45X L136X H23MM

After Service

During the usage of the remote controller, in case any problem occurs or remote controller fails, please contact us promptly and we'll do our utmost to serve you. However, random dismantling or repair of the remote controller is not allowed and we'll not bear responsibility for the remote controller that has been subject to random dismantling.